

electriciQ

USER MANUAL



FRF6LEDW **6" FOLDABLE RECHARGEABLE FAN** **WITH LED LIGHT**

Thank you for choosing electriciQ
Please read this user manual before using this fan and keep it safe for future reference.
Visit our page www.electriQ.co.uk for our entire range of Intelligent electricals

SETTLING IN OK?

We hope this has been helpful to you.

We would love to see how you're getting on with your new purchase, so please share any snaps you have on the platform of your choice below.

Our community awaits your uploads - Snap, tag and hashtag away!



@electriQUK
#electriQUK

WE'RE HERE TO HELP

Should you have any problems or questions with your purchase, please contact a member of our customer service team.

☎ 0330 390 3061

✉ support@electriQ.co.uk

Mon-Fri | 9am to 5pm

Unit J6, Lowfields Business Park,
Lowfields Way, Elland
West Yorkshire, HX5 9DA

SAFETY INSTRUCTIONS

Important!

- Carefully read the instructions before operating the unit
- This appliance is for indoor use only.
- Do not position the unit where it would be subjected to extreme moisture, temperature or dust.
- Do not use in bathrooms or other humid places.
- There are no user maintainable parts, do not attempt to disassemble or repair.
- Do not place the device near heat sources, or expose to direct sunlight.
- Rating: This unit must be only connected to a suitable power source for charging.
- Installation must be in accordance with regulations of the country where the unit is used.
- This fan has been tested and is safe to use. However, as with any electrical appliance - use it with care.
- Avoid touching any moving parts of the appliance.
- Never insert fingers, pencils or any other objects through the guard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Do not leave children unsupervised with this appliance.
- Do not clean the unit by spraying it or immersing it in water.
- Never operate this appliance if the appliance is damaged.
- Any service other than regular cleaning should be performed by an authorized service representative. Failure to comply could result in a voided warranty.
- Do not operate the fan unassembled without protective grilles in position.
- Do not use the appliance for any other purposes than its intended use.
- Always place the unit on a dry and stable surface. Do not move or tilt the unit
- High Velocity fans are designed to create rapid air movement, therefore make sure the fan is not placed near curtains or any objects that may be drawn into the fan inlet.
- The appliance should not be installed in laundry or wet rooms.
- Do not use this unit in environments with flammable and explosive gases.
- Avoid keeping the unit in direct sunlight for a long period of time.
- Only charge using a power supply which meets the minimum.
- Do not cover or restrict the airflow. Do not use in dusty environment.
- Battery care and charging should only be undertaken by competent adult.
- If the battery shows any sign of damage such as leaking, bulging or excessive heat, stop using the product immediately and contact the supplier.
- The fan is supplied with a lithium battery installed. Care must be taken with the battery and charging to maintain its lifespan.
- Do not expose the fan or battery to naked flames or extreme heat.
- The battery must be removed if disposing of the product.
- The battery is to be disposed of safely.
- Lithium batteries are considered dangerous goods. Check your countries laws on transportation and use.

 
FEATURES

- Modern design, ideal for a range of locations
- High Speed Motor with 4 Fan Speed Settings
- LED ring light
- Long battery life
- Device charging capability
- Multiple angles for versatile air flow


SETUP

This unit can easily be moved from one room to another. The fan should always be situated on a flat level surface when in use. Make sure all parts are present and unit is assembled correctly.



PRODUCT OVERVIEW

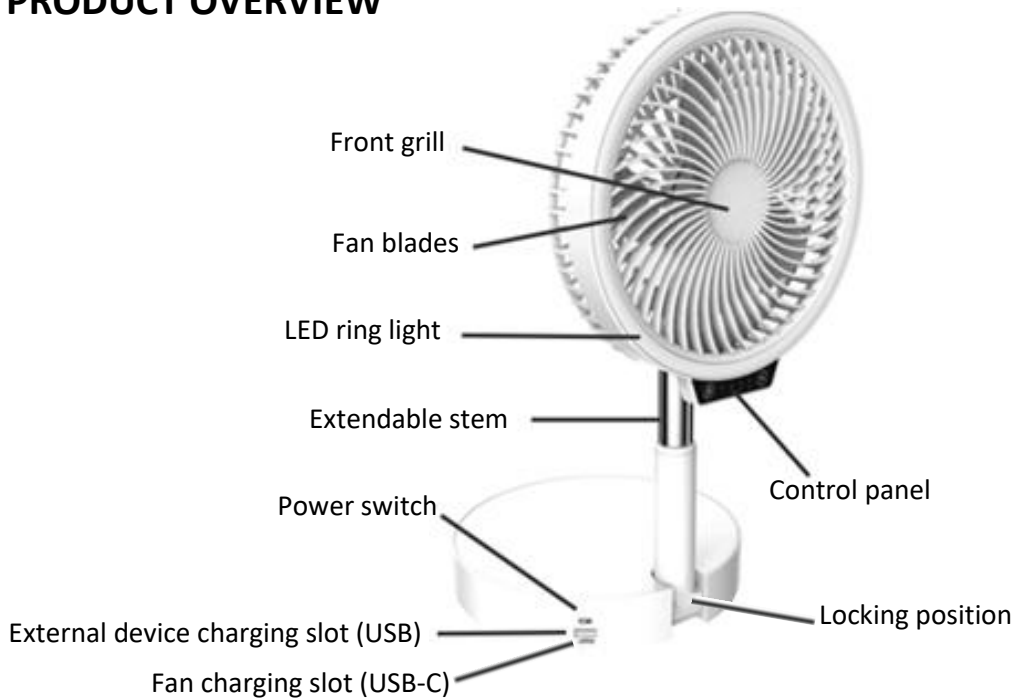


CONTROL PANEL

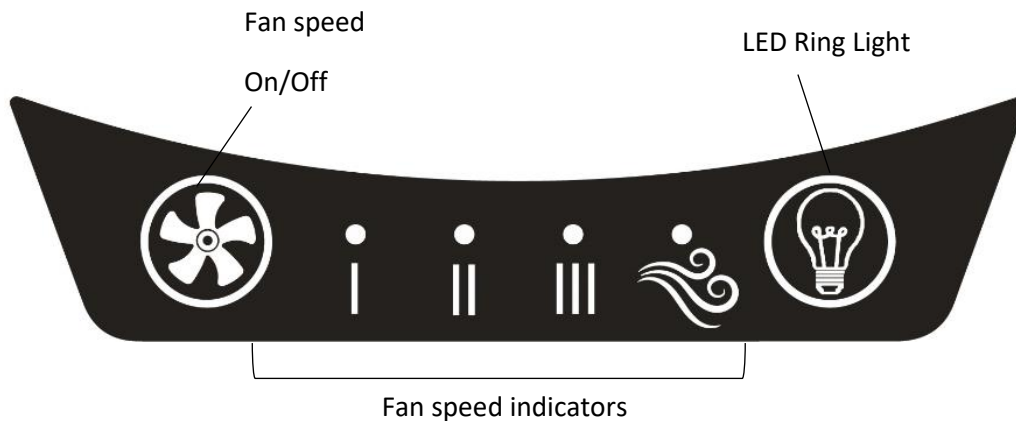 

  
Unfold the fan by gently pulling it upwards.

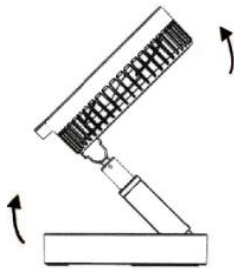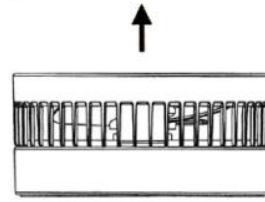

 Extend the fan according to the image to the left.

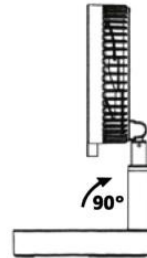


 Set the angle of the fan to 90° relative to the base.

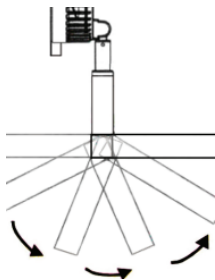

 Flip the base and clip the stem into the slot on the opposite side of the base.

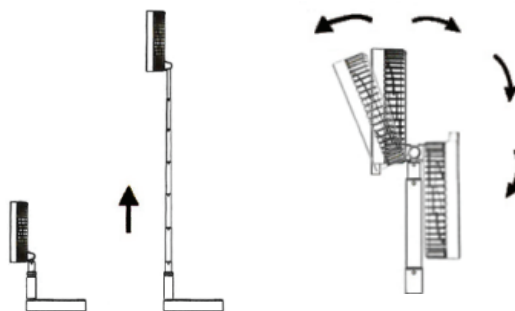

The height of the fan can be adjusted by gently pulling the stem up from the base or pressing it down.



To fold the fan after use, the steps above should be followed in reverse.


OPERATION






1. Charge the fan before use.
2. Ensure the fan is set up in position ready to use on a level dry surface.

| | | |
|-----------------------|--|--|
| ON/OFF | Use the ON/OFF switch on the base of the fan to turn the unit on and off. Press the fan speed button to start the fan. | |
| FAN SPEED |  | <p>Press the FAN SPEED button on the control panel to select your desired fan speed level. The display will show the speed selected.</p> <p>The fan speeds are listed below: I = Low II = Medium III = High Natural = Natural wind speed to simulate the outdoors.</p> |
| LED RING LIGHT |  | <p>Press the LED light button to turn off the LED light.</p> <p>When the LED is light is on, the appliance will automatically run at the lowest fan speed.</p> |

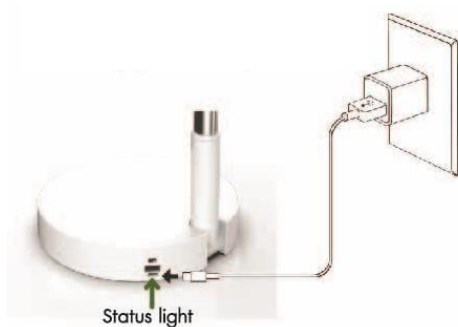 BATTERY LEVEL INDICATOR

The status light will flash every 10 seconds to indicate the current charge level of the battery



| | | |
|---|--------|-------------|
|  | 0-25% | 1 flash |
|  | 26-50% | 2 flashes |
|  | 51-75% | 2 flashes |
|  | 76-99% | 2 flashes |
|  | 100% | Solid light |

Charge using the supplied USB-C cable to charge using a compatible device such as a computer or a USB wall adaptor (2A max). Depending on the power source it can take up to 6 hours to charge.

POWER BANK FACILITY

Your fan comes equipped with the capability to charge your mobile phone or other devices when powered on, to use this feature, simply plug a suitable charging cable into the USB port on the base of the fan and connect your chosen device.

Please note that charging devices via the fan will drastically lower the battery life of your fan. It is recommended to fully charge the fan before using this feature.



MAINTENANCE

CLEANING AND STORAGE

ATTENTION: Please shut off the unit and unplug from the mains before cleaning or performing any maintenance.

CLEANING THE SURFACE

- Clean the grills with a duster or a soft wet cloth.
Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or fan motor.
- The front grill can be opened by twisting in anti-clockwise.
- Do not run the unit until completely dry.
- Place the fan in its original box or cover the fan to protect it from dust.
- Store it in a cool dry place.

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

| Issue | Possible Reason | Solution |
|-----------------------------|---|--|
| No power | 1. The battery is not charged. 2. The unit is not switched on. | 1. Ensure the battery is charged using a suitable device. 2. Switch the unit on using the switch on the base. |
| Strong vibrations and noise | 1. Fan is not used on a flat surface 2. Fan may be damaged | 1. Place on a flat surface. May put an anti-vibration matt underneath 2. if fan is damaged discontinue use and contact service centre |

If the above solutions do not resolve the problem please contact the service centre.

TECHNICAL DATA

| | |
|-----------------------|------------------------|
| Model | FRF6LEDW |
| Fan Speeds | 3 |
| Fan Power | 6.5 W |
| Blade size | 6 inches |
| Rated Input | 15 W |
| Running Current | 1.7 A |
| Battery Capacity | 8000 mAh (Lithium Ion) |
| Charging Input | 5 V 2 A |
| Air Volume | 362 m ³ /h |
| Noise (Max) | 50.5 dB |
| Net Weight | 1.1 kg |
| Product Size (folded) | 196x196x75 mm |
| Product Size (unfold) | 196x196x1000 mm |

electriQ UK SUPPORT

www.electriQ.co.uk/support

Please, for your own convenience, make these simple checks before calling the service line.

If the unit still fails to operate call: 0330 390 3061 or complete the online form

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit J6, Lowfields Way

Elland, West Yorkshire

HX5 9DA

DISPOSAL



Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling center.