



HVSF16B HVSF20B 16 / 20 INCH HIGH VELOCITY STAND FAN

Thank you for choosing ElectriQ

Please read this user manual before using this air circulator and keep it safe for future reference. Visit our page www.electrIQ.co.uk for our entire range of Intelligent Electricals

CONTENTS

SAFETY INSTRUCTIONS	3
FEATURES AND ASSEMBLY	4
CONTROL PANEL AND SETTINGS	5
MAINTENANCE	6
TROUBLE SHOOTING	6
TECHNICAL DATA	7
SUPPORT	8

SAFETY INSTRUCTIONS

Important!

- Carefully read the instructions before operating the unit
- This appliance is for indoor use only.
- Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
- Installation must be in accordance with regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- This fan has been tested and is safe to use. However, as with any electrical appliances use it with care.
- Disconnect power plug from socket before dismantling, assembling or cleaning the unit
- Avoid touching any moving parts of the appliance.
- Never insert fingers, pencils or any other objects though the guard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Do not leave children unsupervised with this appliance.
- Do not clean the unit by spraying it or immersing it in water.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never operate this appliance if the cord or plug is damaged. Ensure the power cord is not stretched or exposed to sharp object/edges.
- A damaged supply cord should be replaced by the manufacturer or a qualified electrician in order to avoid a hazard.
- Any service other than regular cleaning should be performed by an authorized service representative. Failure to comply could result in a voided warranty.
- Do not operate the fan unassembled without protective front and rear grilles in position.
- Do not use the appliance for any other purposes than its intended use.
- Never use the mains plug as a switch to start and turn off the fan. Use the provided ON/OFF switch located on the control panel.
- Always place the unit on a dry and stable surface. Do not move or tilt the unit
- High Velocity fans are designed to create rapid air movement, therefore make sure the fan is not placed near curtains or any objects that may be drawn into the fan inlet.
- The appliance should not be installed in laundry or wet rooms
- Do not use this unit in environments with flammable and explosive gases.
- Avoid keeping the unit in direct sunlight for a long period of time

Energy Saving and Unit Safety Protection Tips

- Do not cover or restrict the airflow. Do not use in dusty environment.
- For maximum performance the minimum distance from a wall or objects should be 50cm.


Warning: To reduce the risk of fire or electrical shock, DO NOT USE THIS FAN with any SOLID STATE Speed Control Device or any variable speed controllers.

HVSF16B / HVSF20B 16 / 20-Inch High Velocity Cool Air Circulator Stand Fan with 3 Speed Settings

SPECIFICATIONS


- Slim design takes minimal space
- High Speed Motor with 3 Fan Speed Settings
- Adjustable Tilt Head

PARTS LIST

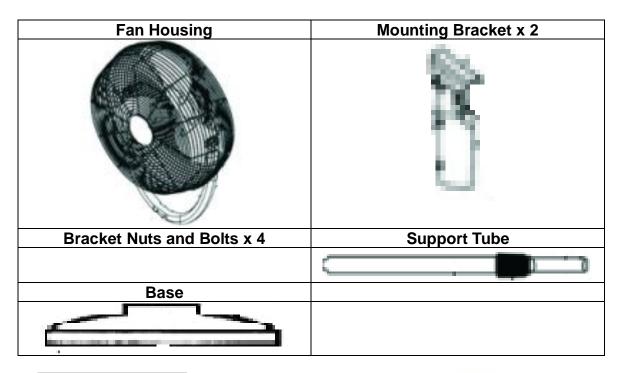

FAN ASSEMBLY


- Attach the fan housing to the support tube using a mounting bracket at either side, to clamp both pieces into position before securing with the 4 Bracket Bolts and Nuts.
- 2. Attach the opposite end of the support Tube to the Base using the base bolts through the underside of the Base.

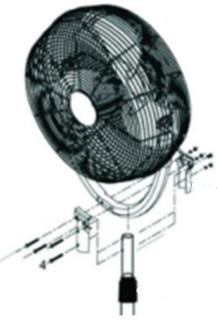

OPERATION

- 1. Set your fan on a level dry surface.
- 2. Before plugging into the wall outlet adjust the fan head to your desired angle: loosen the mounting screws then tighten them back in position.
- 3. Plug the power cord into a standard 220~240 V wall outlet.

CONTROL PANEL AND SETTINGS

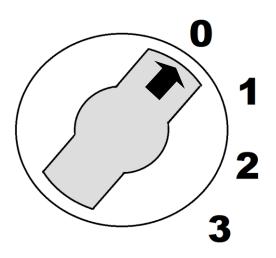

Twist the control knob from the 0 and select the appropriate speed **Low** (1) **Medium** (2) **High** (3)

INSTALLATION

This unit can easily be moved from one room to another. While moving the unit please note that it must always be kept upright and then placed on an even surface.

- Remove any packaging keeping the fan in a vertical position.
- Make sure all parts are present and unit is assembled correctly
- Connect the power plug to a working socket, and then press the power button.

MAINTENANCE

CLEANING AND STORAGE

ATTENTION: Please shut off the unit and unplug from the mains before cleaning or performing any maintenance.

Cleaning the surface

Clean the grills with a duster or a soft wet cloth.

Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or fan motor Do not run the unit until completely dry.

Place the fan in its original box or cover the fan to protect it from dust. Store it in a cool dry place.

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

Issue	Possible Reason	Solution
No power	1. Power cord is unconnected	1. Connect the power cord
	2. The There is no power from socket	2. Check socket is turned on
	3. The power switch is not on.	3. Turn the unit on
	4. The fuse has blown	4. Replace the fuse in the plug
Odour emission from unit	1. New unit. When the unit is used for the first time the fan motor may produce and odour which will dissipate within a week of use	1. No action required
Strong vibrations and noise	 Fan is not used on a flat surface Fan may be damaged 	 Place on a flat surface. May put an anti-vibration matt underneath if fan is damaged discontinue use and contact service centre

If the above solutions do not resolve the problem please contact the service centre.

TECHNICAL DATA:

Model	HVSF16B	HVSF20B
	High Velocity	
Fan Speed	3	
Blade size	400 mm	500mm
Cable length	1.5 meters	
Rated Input	90W	120W
Running Current	0.37A	0.52A
Air Flow	3800 m³∕hr (2300	6000 m³/hr (4800
	CFM)	CFM)
Noise	Max 50dB	Max 60dB
Power Supply	230V/50Hz	230V/50Hz
Net Weight	8 kg	9.6 kg
Gross Weight	8.8 kg	10.4 kg
Net Size	520mm x 450mm x	580mm x 450mm
(assembled)	1200mm	x 1320mm
Gross Size	470mm x 250mm x	550mm x 250mm
(packed)	480mm	x 560mm

electriQ UK SUPPORT

www.electriQ.co.uk/support Call: 0330 390 3061 or complete the online form Office hours: 9AM - 5PM Monday to Friday www.electriQ.co.uk Unit J6, Lowfields Business Park Lowfields Way, Elland West Yorkshire, HX5 9DA



Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.