



EN

MISTING FAN

Polifemo Drip







OPERATING INSTRUCTIONS


Read the instructions carefully before operating the appliance or carrying out maintenance operations.
Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage.

GENERAL SAFETY INFORMATION

- Only use this appliance as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to people.
- Make sure that the type of mains power complies with the electrical requirements of the appliance (220 V~/50 Hz).
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- Disconnect the mains power when the appliance is not used or for cleaning operations.

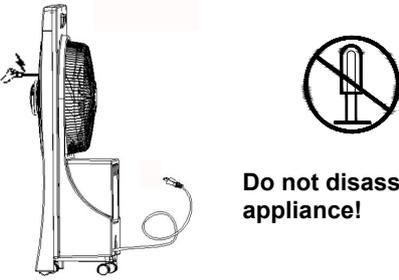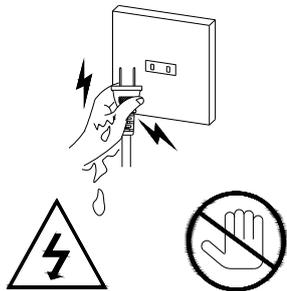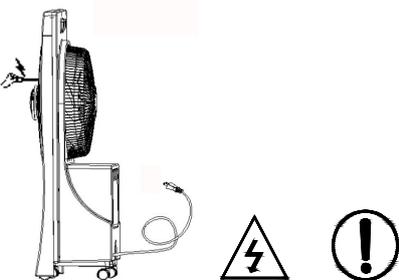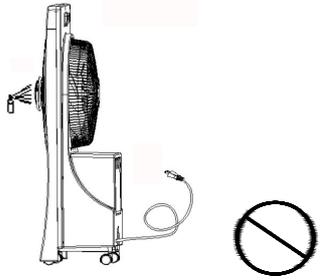
<p>In the event of any problems, switch off the appliance immediately, do not attempt to repair it, and take it to your local After-Sales Service Centre. Do not remove or replace individual parts, as this could affect product safety.</p>  <p>Do not disassemble the appliance!</p>	<p>Do not touch the power cord with wet or damp hands; risk of electric shock.</p>  <p>Attenzione!!! Non toccare Rischio di scossa elettrica!</p>
<p>Do not insert objects into the appliance grilles. This could cause leaks, short-circuits and damage to the product.</p>  <p>Warning!!! Do not touch Risk of electric shock!</p>	<p>Do not spray flammable substances or pesticides near the product as they could damage it.</p>  <p>Prohibited!</p>

 Do not use the appliance if the cord or plug is damaged. Do not attempt to change the power cord yourself. If the power cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.



Warning!!! Do not touch
Risk of electric shock!

Do not bend or stand heavy objects on the power cord.

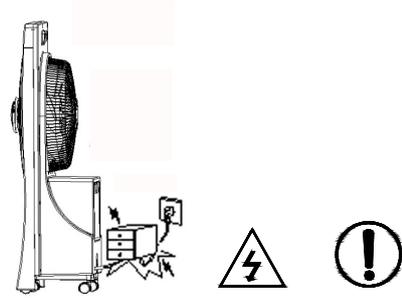


Warning!!! Do not touch
Risk of electric shock!

Turn the switch off and unplug before carrying out any maintenance work or moving the appliance. Always unplug from the socket when the appliance is not in use.



Compulsory!

To disconnect the appliance, press the OFF button and unplug from the socket. Only pull on the plug. Do not pull the cord. Otherwise the cable may be damaged or leaks, etc. may occur.

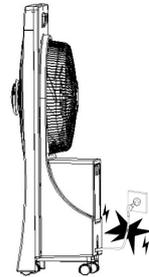


Warning!!! Do not touch
Risk of electric shock!

Do not pour water over the product: risk of shortcircuits and damage to the product.





Warning!!! Do not touch
Risk of electric shock!

Do not leave the airflow directed towards children for long periods of time: it is not good for their health.

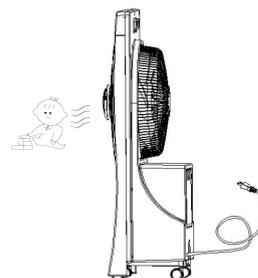

Prohibited!

DESCRIPTION OF PARTS

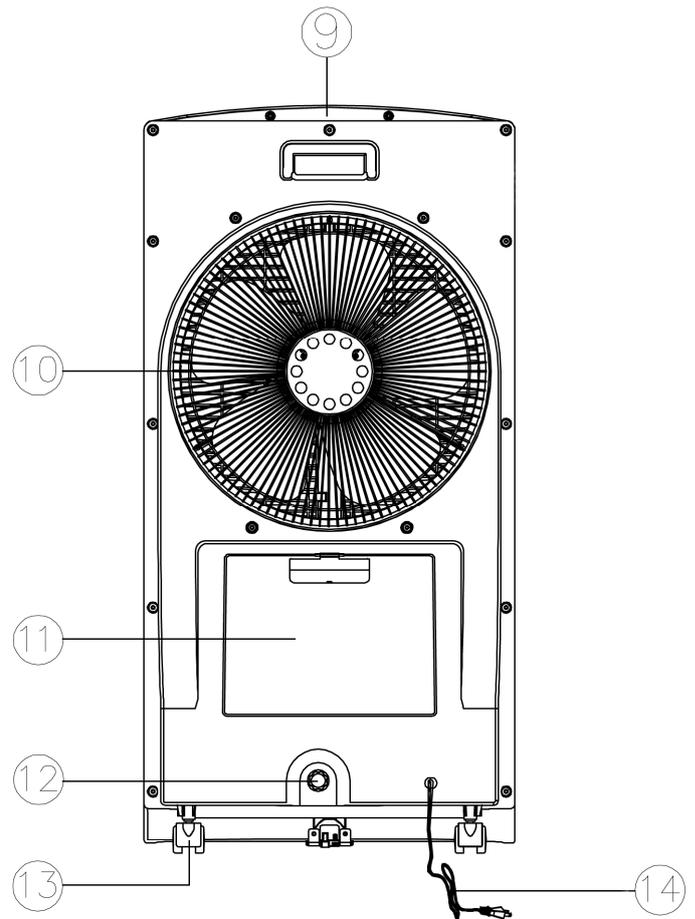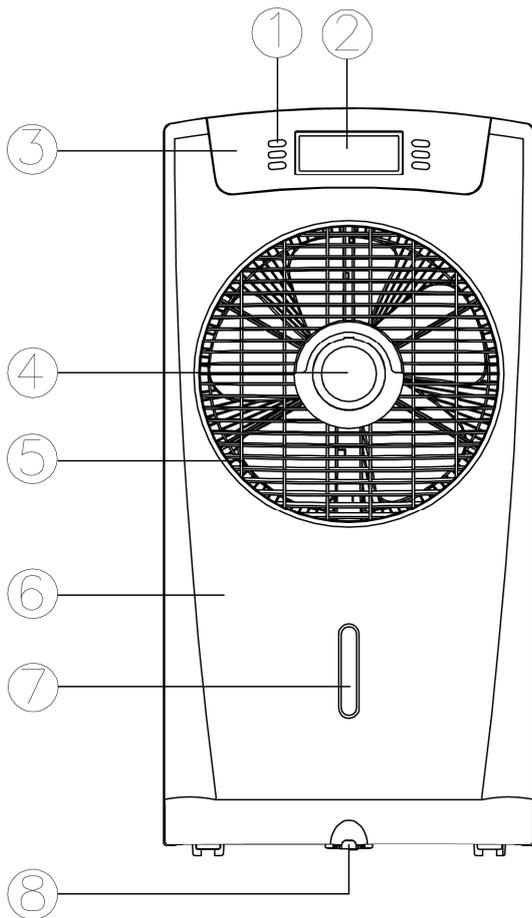

1. Button
2. Digital screen
3. Control panel
4. Misting plate
5. Air guide wheel
6. Front cover
7. Water level view
8. Anti-tilt bar
9. Handle
10. Back guard
11. Water tank
12. Drain cover
13. Swivel castor
14. Power cord

HOW TO USE THE APPLIANCE

The appliance does not need to be installed.

Position the unit on a flat, stable surface and connect the power cord to a suitable power socket (230 V~): you will hear a sound to indicate that the appliance is in standby and the fan can be switched on using the ON/SPEED button. The fan can be switched off using the OFF button.

When you move the appliance, use the handle on the back. Do not use this fan in an area with high humidity, rich of dust or with a temperature exceeding 40 ° C.

This product can be used both as a fan, with 3 modes (Normal, Natural and Sleep) and 3 fan speed options (low, medium and high) and as nebulizer.

MISTING FUNCTION


In this case the rear tank should be filled with demineralized water, up to but not exceeding the maximum level as indicated.

Through a high-frequency vibration (not audible and not harmful to people) the water under the tank is nebulized and sucked into the tube up to the misting plate where it is emitted into the room.

There is no need to heat or to add any chemical agent. The refreshing action of water can give a sense of well-being when the environment is dry.

When the water below the tank falls below the minimum level, the appliance emits a sound and the nebulizer switches off.

CONTROL PANEL AND AVAILABLE FUNCIONS

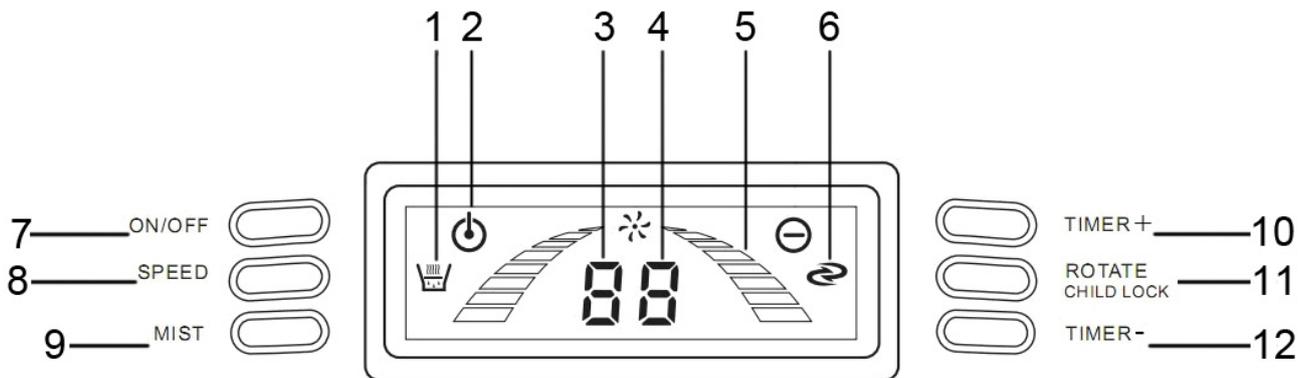

L'apparecchio può essere usato come nebulizzatore anche a ventilazione spenta tramite i pulsanti MIST. La velocità di ventilazione (1,2,3) rimane in memoria quando si spegne la ventilazione con il pulsante OFF.

DISPLAY

1. Misting icon (on/off)
2. Power on icon
3. Wind speed icon (speed 1, 2 o 3)
4. Timer icon (off/on 1 to 9 hours)
5. Fan function icon (on/off)
6. Rotation icon (on/off)

BUTTONS ON THE CONTROL PANEL

7. ON/OFF button
8. SPEED button
9. MIST button
10. TIMER + button
11. ROTATE/CHILD LOCK button
12. TIMER - button

ON/OFF : Press the ON/OFF button, the fan will start with nature wind mode, and fan function icon is lighten on the screen at the same time, the wind speed display at 1. **The Natural wind mode means that the fan will in the way of: running 2 seconds and stopping for 3 seconds alternatively.** Press this ON/OFF button again, all functions will shut off.

SPEED : Press this button, the wind speed will change to normal wind mode low speed, and the screen will display at 2. Press the button the second time to medium speed and screen will display at 3. Press the button the third time, the wind speed will change to high speed and display at 4. Press the button the forth time, the wind will stop and display at 0. The wind speed will switch according to normal wind with display of 2-3-4-0 sequence when pressing this speed button every time.

MIST : Press the MIST button to start the misting function, the misting icon will be lighten and the misting function starts to work in mode 1: continuous misting.

Press it the second time, the mist will work in mode 2: mist for 3 minutes and stop for 5 minutes alternatively.

Press it the third time, the mist will work in mode 3: mist for 5 minutes and stop for 10 minutes alternatively.

Press it the forth time, the mist will stop and the misting icon will be off.

The misting function is separately from the fan function, so you could use it as humidifier.

ROTATE/CHILD LOCK : When the fan function is on, press the rotate button to rotate, the rotation icon will be lighten on the screen. Press it one more time, the rotation will stop and the rotation function icon will be off. Please note that when the fan function isn't on, the rotation function cannot be used. Press this key for 3 seconds, to start the child lock function, and press it again for 3 seconds to cancel the function. This child lock function can only be used when the fan function is on.

TIMER +/- : When the fan or the misting function is on, press the Timer button for time setting. The screen will display H icon and timer icon display at 1 hour, the timer icon it will switch according to "1 hour→2 hours→3 hours→.....→9hours→timer off" sequence when pressing the timer button every time. This means that the fan or misting function will be on until the time set and will cut off automatically. If without using the timer, you have to stop it manually. Press this key for 3 seconds to turn off the screen light. But the other function is still on, this is an user friendly as well as eco design because it saves energy and user can opt for illumination off at night time when sleeping. Press it again for 3 seconds to light up the screen.

REMOTE CONTROL



1. **ON/OFF** button
2. **TIMER+** button
3. **MIST** button
4. **SPEED** button
5. **TIMER-** button
6. **ROTATE** button

The remote control has six buttons whose functions are identical to those on the control panel (already illustrated in detail). It works at a maximum distance of 5 meters from the appliance and at a maximum angle of 45°.

HOW TO INSERT / REMOVE THE REMOTE CONTROL BATTERIES (refer to the diagram below)


Open the battery cover on the back of the remote control (press and pull the cover).

Place the batteries inside the cover, making sure the polarity is correct.

Slot the cover back into position on the remote control.

Use cells model no. LR03AAA 1,5V, compliant with Battery Directive no. 2006/66/EC.

Remove the batteries when not using the remote control for a long period of time.

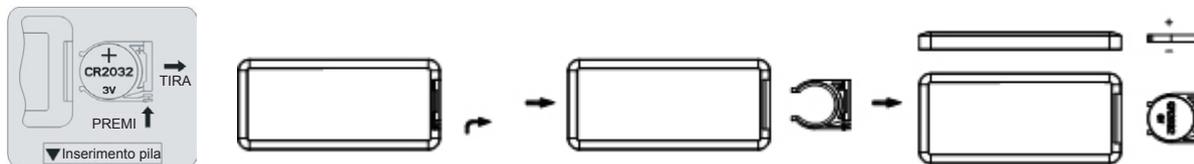


INFORMATION FOR CORRECT DISPOSAL OF THE BATTERIES IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC

Please replace the battery when its electrical charge has been exhausted: at the end of its useful life, it must not be disposed of together with unsorted waste. It must be delivered to appropriate separated waste disposal plants or to dealers that provide a similar service. Separate waste disposal of batteries prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the battery. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.



FILLING THE WATER TANK

THE TANK MUST BE FILLED WITH DEMINERALIZED WATER IN ORDER TO OPERATE THE APPLIANCE IN MISTING MODE.

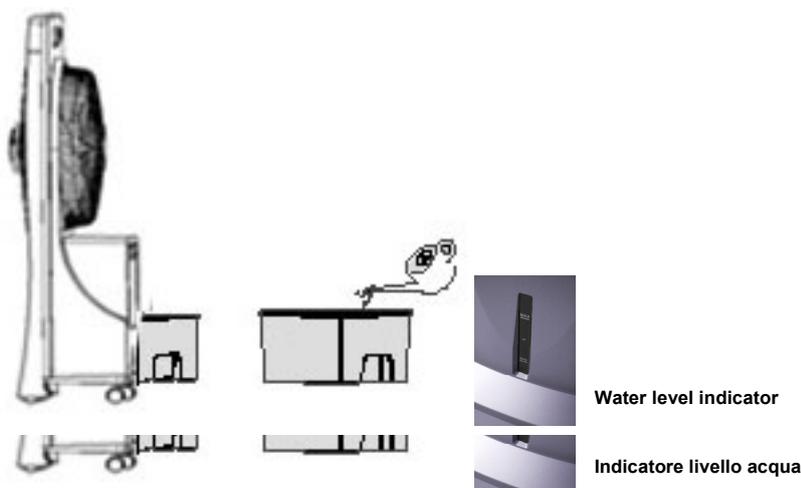

MAINTENANCE AND STORAGE

WARNING: ALWAYS UNPLUG THE APPLIANCE BEFORE CLEANING OR MAINTENANCE PROCEDURES.

IMPORTANT: DO NOT SUBMERGE THE PRODUCT IN WATER.

Cleaning the outside surface of the appliance

Use a soft cloth to remove any dust from the product.

If this is not enough, use a soft cloth dampened with water and a mild detergent at a temperature not exceeding 50°C. Let the appliance dry completely before using it.

Do not use corrosive detergents or solvents such as petrol. Do not wash the appliance with water. Do not use oils, chemical substances or other items that may damage the surface to clean it.


Use a vacuum cleaner to remove dust from the air inlet/outlet grilles.

Cleaning the tank (every about 2 weeks)

Take out the tank and and rinse it under running water, removing any residue.
Let the dry completely after washing them; then re-fit it.


Misting box cleaning (about every 2 weeks)

Pull the misting lead off the misting box, then use a soft cloth dampened with water and a mild detergent to clean the misting box and dry it with a dry cloth.

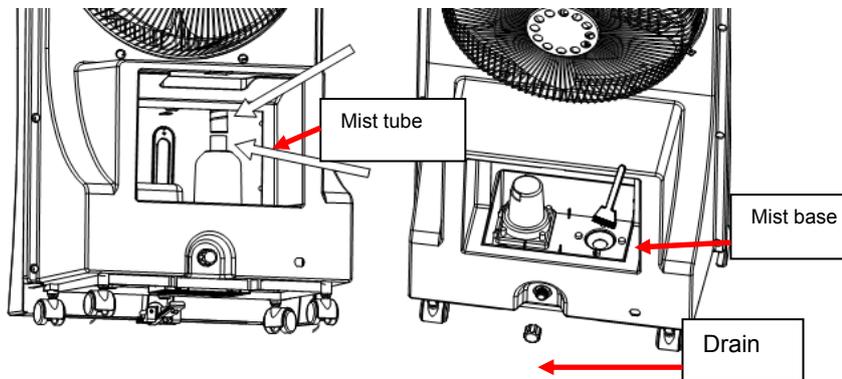


Cleaning of the mist plate

1. Pull out the decorative ring on the mist plate ①.
2. Remove the three screws from the cover ②.
3. Pull out the mist plate and strip ③ & ④.
4. Remove the 2 screws from the mist plate ⑤.
5. Pull out the mist plate ⑥.
6. Pull out the front grille ⑦.

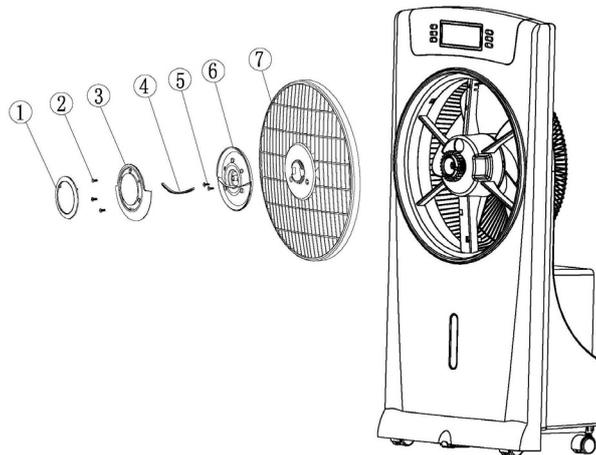

To clean the back guard and fan blade

1. Remove 2 pieces of screws from the back guard.
2. Take the back guard off.
3. Remove the nut and nut washer from the motor axle.
4. Take the fan blade off.
5. Wash these parts and dry them.

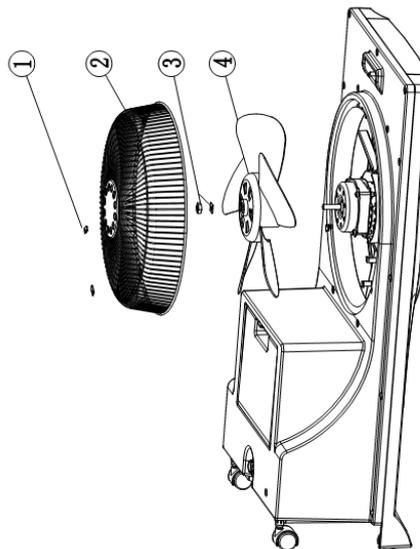

STORAGE

If the appliance is not used for prolonged periods, disconnect the power cord and store the appliance with this manual in its original packaging, in a cool and dry place.



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2002/96/EC

When this appliance reaches the end of its useful life, it must not be disposed of with household waste. It must be delivered to appropriate separated waste disposal plants or to dealers that provide a similar service. Separate waste disposal of an electrical appliance prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the product. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.



www.argoclima.com

MADE IN CHINA