

D011A Brackets Wall Mount Template

Position the template vertically and attach it with tape to the wall. Drill all six holes indicated.

Brackets installation guide



Step 1

Stick the template on the wall




Step 2

Drill six $\text{Ø}7\sim\text{Ø}8\text{mm}$ holes indicated, and then insert screw sleeve.




Step 3

Fix bottom bracket with screws first

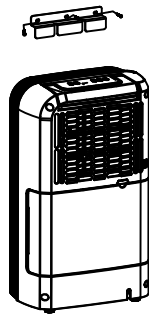

Step 4

Fix the unit on bottom bracket, and then fix top bracket with unit together.

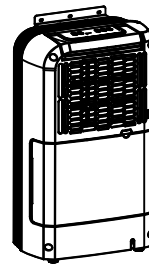

Step 5

Finish installation and checking

462.4

