


electriQ

AIRCUBE[®] 10DLX

PORTABLE AIR CONDITIONER WITH HEATPUMP

USER MANUAL

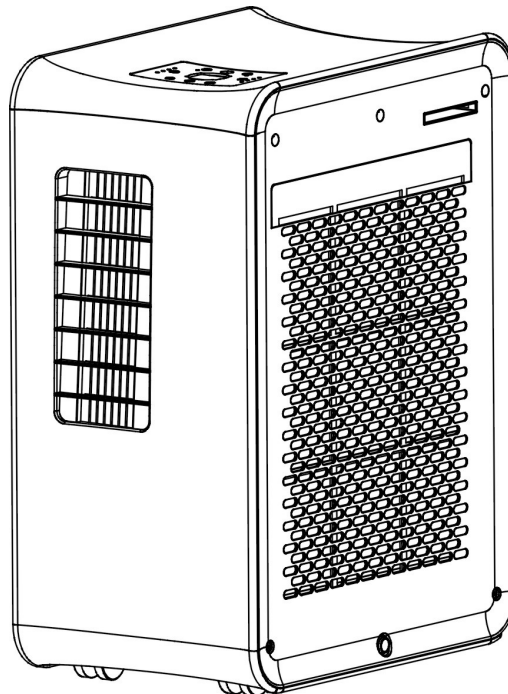

**Thank you for choosing ElectrIQ.
Please read this user manual before using this innovative Air Conditioner and keep it
safe for future reference.
Visit our page www.electrIQ.co.uk for our entire range of Intelligent Electricals**

CONTENTS

1. SAFETY INSTRUCTIONS	3
2. FEATURES AND PARTS LIST	4
3. INSTALLATION	6
4. OPERATION AND SETTINGS	7
5. WATER-DRAINAGE	9
6. MAINTENANCE	10
7. TROUBLE SHOOTING	11
8. APPENDIX	12

SAFETY INSTRUCTIONS

Important!


- Carefully read the instructions before operating the unit. **Note:** This AC is for indoor use only.
 - Rating: This unit must be only connected to a 220-240 V / 50 Hz earthed outlet.
 - Installation must be in accordance with regulations of the country where the unit is used.
 - If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
 - This air conditioner has been tested and is safe to use. However, as with any electrical appliances - use it with care.
 - Disconnect the power plug from socket before dismantling, assembling or cleaning.
 - Avoid touching any moving parts of the appliance.
 - Never insert fingers, pencils or any other objects through the guard
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
Do not leave children unsupervised with this appliance.
 - Do not clean the unit by spraying it or immersing it in water.
 - Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
 - Never operate this appliance if the cord or plug is damaged. Ensure the power cord is not stretched or exposed to sharp object/edges.
 - A damaged supply cord should be replaced by the manufacturer or a qualified electrician in order to avoid a hazard.
 - Any service other than regular cleaning or filter replacement should be performed by an authorized service representative. Failure to comply could result in a voided warranty.
 - Do not use the appliance for any other purposes than its intended use.
 - **The air conditioner unit must always be stored and transported upright, otherwise irreparable damage may be caused to the compressor; if in doubt we suggest waiting at least 24 hours before starting the unit.**
 - Avoid restarting the air conditioning unit unless 3 minutes have passed since being turned off. This prevents damage to the compressor.
 - Never use the mains plug as a switch to start and turn off the air conditioning unit. Use the provided ON/OFF switch located on the control panel.
 - Always place the unit on a dry and stable surface.
 - The appliance should not be installed in laundry or wet rooms
- ### Energy Saving and Unit Safety Protection Tips
- Do not cover or restrict the airflow from the outlet or inlet grills.
 - For maximum performance the minimum distance from a wall or objects should be 50cm. Unit is fitted with thermal cut off sensor that will prevent overheating
 - Keep the filters clean. Under normal conditions, filters should only need cleaning once every three weeks (approximately). Since the filters remove airborne particles, more frequent cleaning may be necessary, depending on the air quality.
 - For the initial start-up set the fan speed to maximum and the thermostat to 4-5 degrees lower than the current temperature. After, set the fan switch to low and set the thermostat to your desired setting.
 - To protect the unit we recommend not using the cooling function when the ambient temperature is higher than 35°C.
 - To protect the unit we recommend not using the heating function when the ambient temperature is lower than 7°C. Use electrical or alternative heating to raise the room temperature to 10°C than start the air conditioner in heat mode and set it to the desired temperature. Heating by heat pump will take longer but is cheaper than any other form of heating and ideal for maintaining room temperature constant.

FEATURES AND PARTS LIST

1. Features

- Part of ElectrIQ AirCube® range of Intelligent Air Conditioning products
- Cooling, Heating and Dehumidifying for all around the year use
- Improves comfort and indoor air quality
- Self-evaporative system - no external water tank needed
- Compact, designer inspired luxury model
- Digital Control Panel with side vents to prevent dust and dirt entering the machine.
- Bright LED screen, indicates temperature and error codes
- Remote control that can be stored in slot at on the side of unit after use.
- The hot air outlet is positioned high on the unit – this allows for improved performance with the use of a short hose
- On/Off timer function – allows you to choose when the unit operates both in air conditioning or dehumidifying mode
- Advanced Compressor protection technology
- Recessed castors for improved portability

2. Parts list:

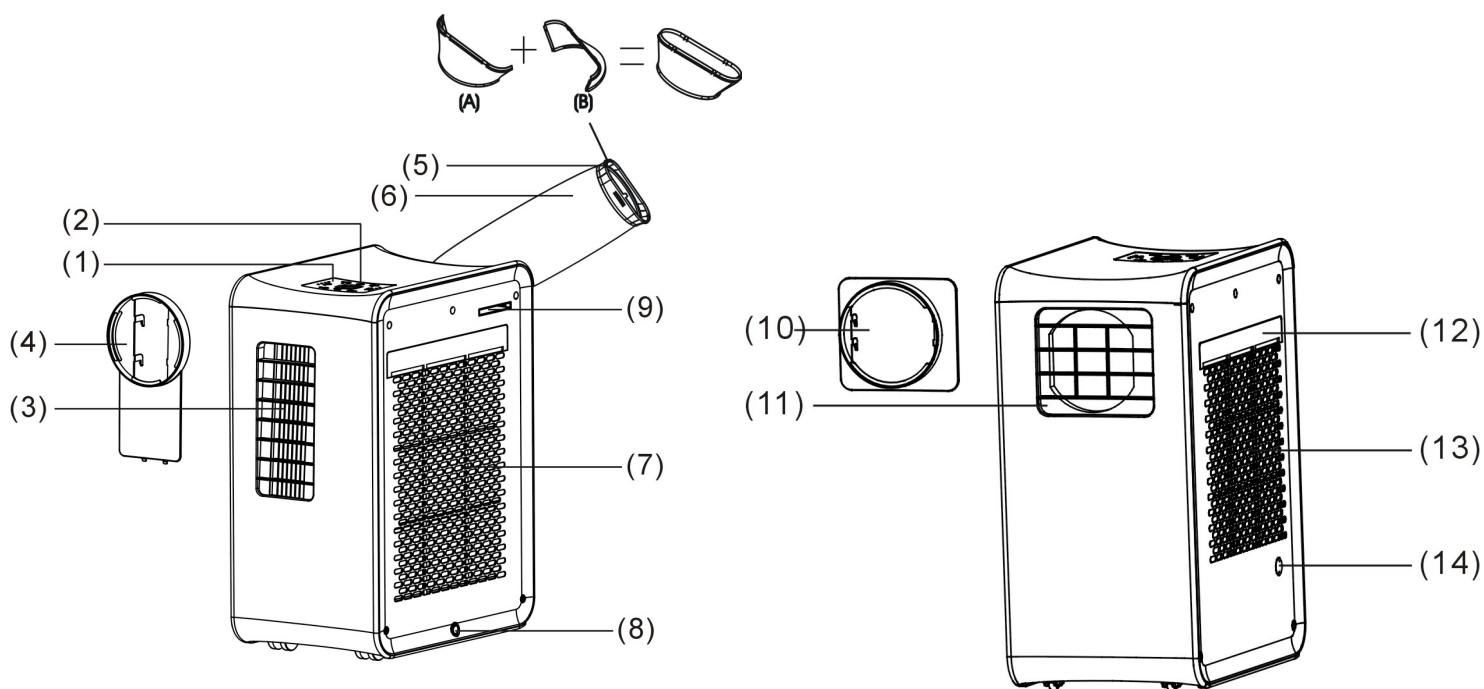

- | | |
|-------------------------------|---------------------------------|
| 1. Control panel | 8. Bottom drain port |
| 2. Remote control sensor | 9. Remote control slide in slot |
| 3. Cold air outlet | 10. Hot air outlet hose mount |
| 4. Cold air outlet hose mount | 11. Hot air outlet |
| 5. Exhaust hose connector | 12. Evaporator filter |
| 6. Exhaust hose | 13. Cool air inlet |
| 7. Hot air inlet | 14. Secondary drain port |

INSTALLATION

Warning: Before using this unit, please keep it upright for at least 3-4 hours.

This unit can easily be moved from one room to another.

While moving the unit please note that it must always be kept upright and then placed on an even surface.


Unpacking

Open the box and remove all the packing out of way

Grip the unit by the carry handles located on either sides of the unit and carefully lift until it slides out of the foam base

Lift and lean the unit slightly to take out exhaust hose from under the unit as in the picture attached

Install the exhaust hose on the unit before operating the unit

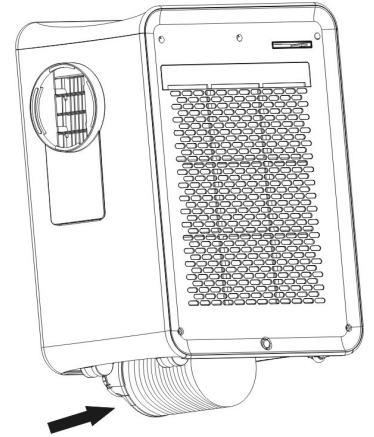

CONTENTS

1 / Air conditioner unit


2 / Remote control

3 / Side hose mount


4 / Hose and window kit

Assemble the hose


1. Clip the hose connector to side of the unit
2. Insert the hose and rotate is firmly into adapter
3. To remove the hose reverse the procedure

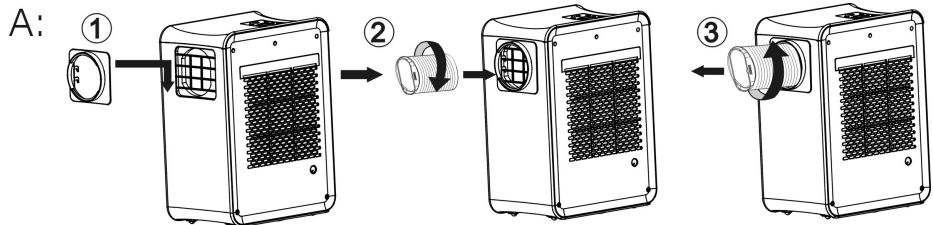

Note: To Install the hose for **heat mode** please remove the hose and clip as in figure C① and reversing it to the other side of the unit using the adapter provided. Assemble the adapter on the panel facing the grills as in figure (B). After insertion of the adapter the procedure is the same as in figure (A). **In heat mode the unit will look as in figure C②.**

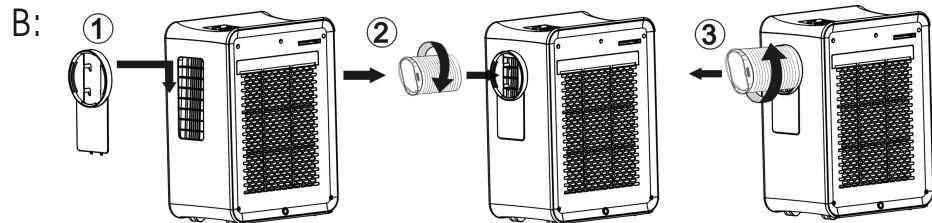


C: ① hose+clip / adapter ②

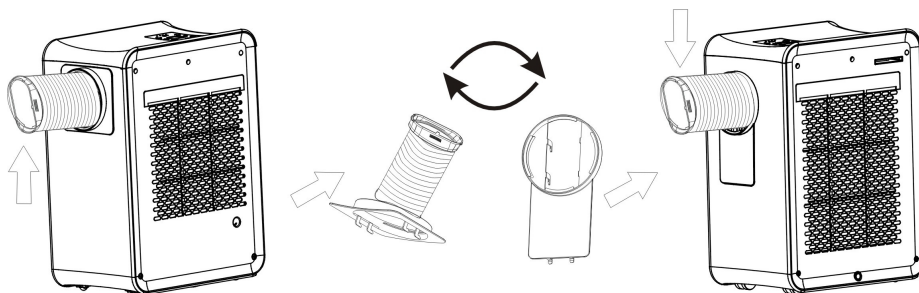


Assemble hose fish tail adaptor: Prepare both parts of hose adaptor and clip them together. Do not push too hard as this may cause damage.

Extend one head of the hose and screw the adaptor to it. **Note:** to screw it into place should take no less than three rotations


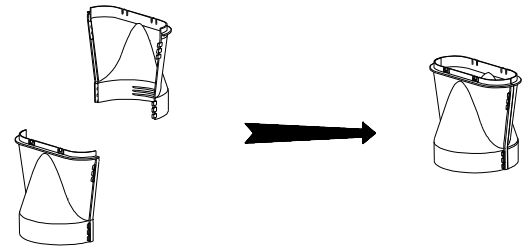


Installation of window kit


Partially open the window and then fix the window kit to the window

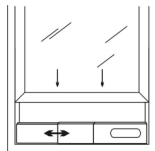




Window slider kit
min: 55cm
max: 100cm

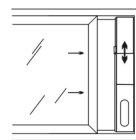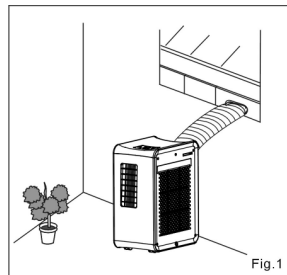

Window slider kit
min: 55cm
max: 100cm

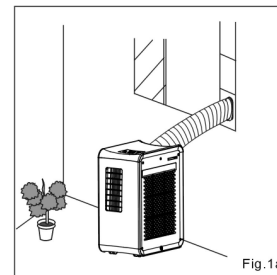

Clip the other end of the hose with the fishtail adaptor to the air outlet of the window slider

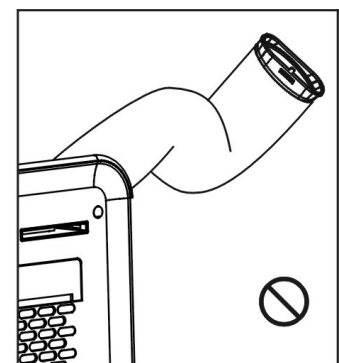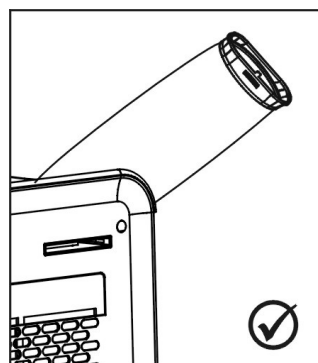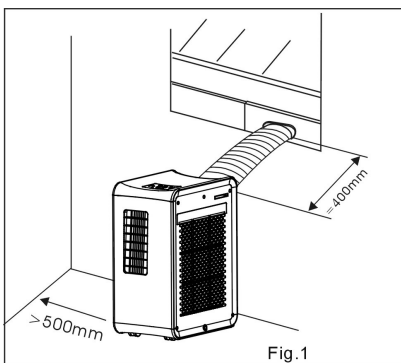

Make sure the unit is upright and there are no obstructions to the air inlets and outlet grills.

Note: The window kit is only designed to be installed with sliding or sash windows or doors. The window kit is not made to be used with any other style of windows. However the fish tail adaptor can be used with most windows / doors but there will be an cold air escape making unit less efficient. When using the cooling mode ensure that the opening left is as small as possible. The best form of installation is through a wall duct.

Please note that the unit will need to be vented out in heating mode, ideally through the wall. By properly venting your air conditioner expels cold air from your room while efficiently heating it.

Important safeguards


The length of the soft hose extends from 28 cm to 150 cm. If hose is extended above this length the unit may malfunction and this can invalidate the warranty. Shorter the hose the better the results. The outlet vent must be well ventilated and not obstructed as this will cause the unit to overheat. Avoid bending the air hose more than 30 degrees.

OPERATION AND SETTINGS

This portable air conditioner boasts four functions: cooling, heating, dehumidifying and fan. The fan has three speeds: high, medium and low
Temperature range settings are: 18--30°C
The unit will also display operating function, temperature, fault diagnostic and protective functions on the LED screen.

1. Control instruction:

Control panel:

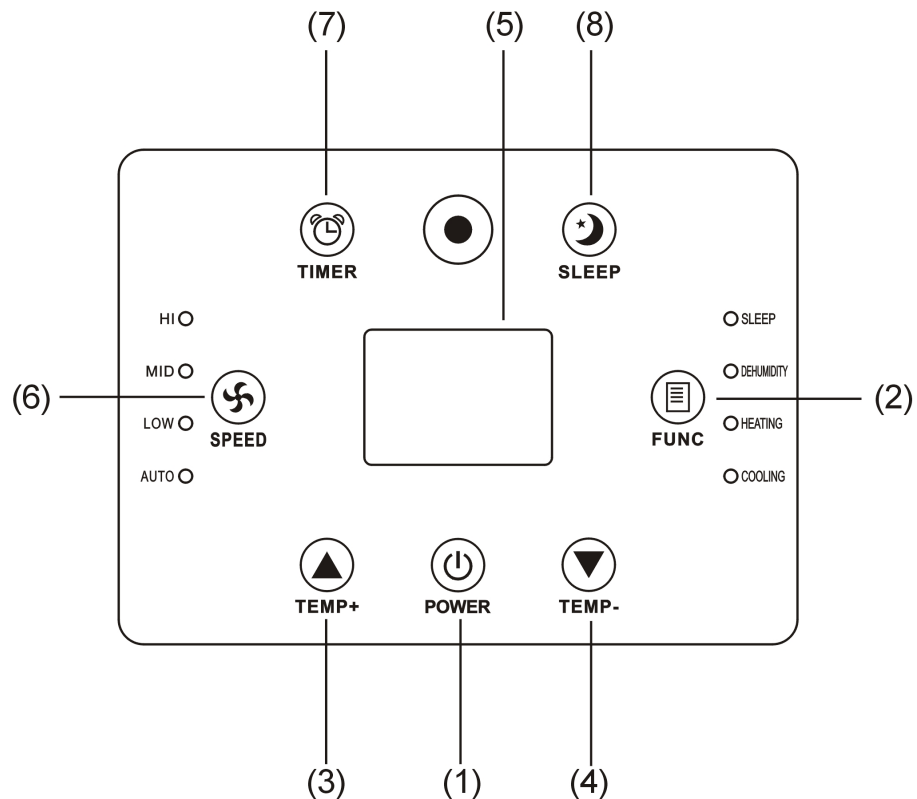

When plugged in the unit is automatically in standby status

POWER button

Press this button to turn the unit on and enter cooling mode. Press again and the unit will switch off.

FUNCTION button

Press this key to choose Cooling, Heating or Dehumidifying Mode

TEMP- and **TEMP+** button: sets temperature

In cooling mode, the temperature can range from 17- 30 °C

In heating mode, the temperature can range from 15- 25 °C

SPEED Fan button

HIGH→MEDIUM→LOW and AUTO

If "AUTO" is selected during cooling function the fan speed will automatically be adjusted to HIGH, MEDIUM or LOW according to the difference between settings and ambient temperature.

In Dehumidifying mode, the fan is preset to low speed

In HEATING mode, the fan is preset to high speed

TIMER button

Press the icon to select your desired operating times.

Use the **TIMER** button to adjust hours

You can only set the auto-shut off timer while the unit is operating (on)

You can only set the auto-start timer while the unit is in standby (off)

You can set the function and fan speed while setting the timer.

Pressing the **POWER** key before count down turns the unit on or off will clear the settings

SLEEP button

While in **cooling** mode, press the **SLEEP** to enter **SLEEP** mode. It will increase the setting with 1 °C after an hour and readjust to a 2 °C increase after 2 hours.


While in **heating** mode, press the **SLEEP** to enter **SLEEP** mode. It will decrease the setting with 1 °C after an hour and readjust to a 2 °C increase after 2 hours.

LED DISPLAY The display indicates the current ambient temperature or the timer setting. When the set temperature or the timer is adjusted, the new setting is shown then the display returns the current set temperature.

※ The display is also used to show error codes should a fault occur, see ERROR CODES

ALARM When the water tank is full, **E4** will be displayed on the LED panel. To resume operation, please remove the rubber cap of the drain hose and empty the tank. The E4 warning will disappear after draining, and the unit can be restarted by pressing the POWER key.

2. Remote control

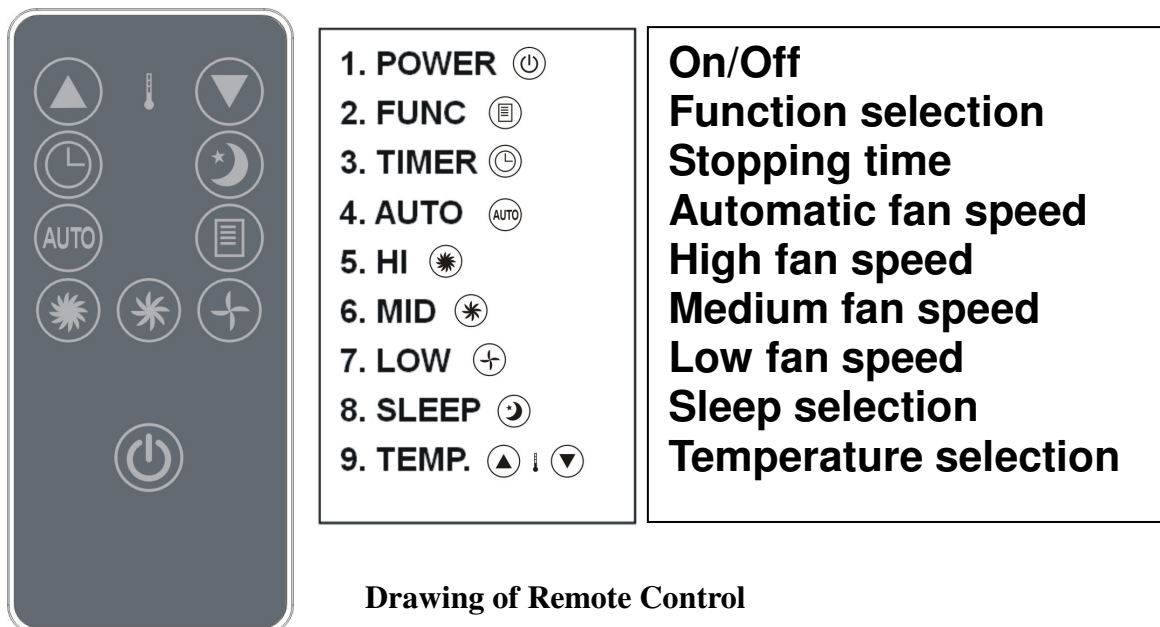

Drawing of Remote Control

3. Multi protective function

3.1 Anti-freezing protecting control:

When the ambient temperature is low while in Cooling Mode, the compressor and water pump will stop working if the copper coil temperature is too low. When the copper coil temperature increases, the protection will be stopped automatically.



3.2 Water-full protection:

When the water level in the internal water tank is surpassing the maximum level, the unit will alert automatically and E4 will be displayed on the LED screen. Please discharge water. In the machine according to "Water Drainage" section.

3.3 Compressor protection

Compressor has an overheating protection function and may stop to prevent compressor damage. Also the compressor runs under a 3 minute delay protection function.

WATER-DRAINAGE

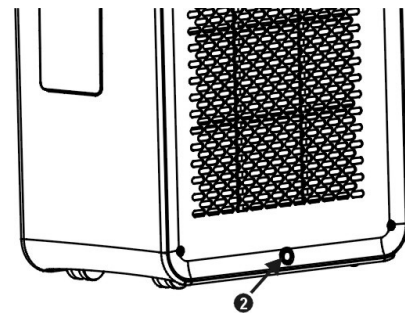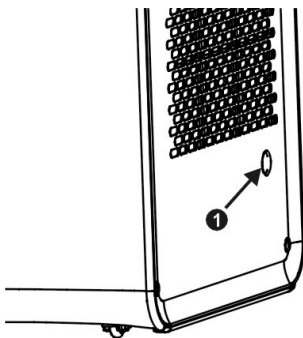

This model is an advanced self-evaporative air conditioner, which reduces the need to empty the water tank in cooling mode. If the unit is vented correctly most of the water is reused to cool the condenser coils and any excess is evaporated.

Please do not use continuous drainage if you intend to use the self-evaporating facility for improved cooling effect.

1. Manual drainage:

1.1 When the internal water tank is full the unit will stop working.

1.2 Shut off the unit and unplug. Try not to move the model abruptly as this may cause water to spill out from internal water tank.

1.3 Place a tray under the water plug.

1.4 Screw off the water plug and unplug the water blocker - water will drain from the internal container.

1.5 Put the water blocker back

2. Continuous drainage:

2.1 Remove the water plug

2.2 Use a water pipe to connect to the water outlet.

2.3 You can plumb this pipe into your current plumbing system, lead it outside or use a water pump.

Note

When the unit is in the cooling function, it is recommended not to have the drain pipe installed. Please make sure that the rubber cap is in place when the unit is running.

When operating the heating function, the low rubber cap ① on drain port should be pulled out and install a proper drain pipe in order to improve the heating effect

When operating the dehumidifying function the unit must be used with a drain hose.

- Please remove the air exhaust hose, connect a drain hose to the drain hole and lead the water to the outside in order to intensify dehumidifying capacity.

- ※ When the water tank is full, "E4" will be displayed on the display panel. Please remove the rubber cap ② of the drain port to drain out the water first. After the drainage is completed, please restart the unit and then the unit can operate normally.

Maintenance

Cleaning

Please shut off the unit and unplug from the mains before cleaning or performing any maintenance


Clean the surface

Clean the plastic housing with a duster or a soft wet cloth.


Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage.

Air filter cleaning

- a) Clean the air filters every 2 weeks. If the air filter is blocked with dust, the unit's performance will be significantly affected.
- b) Pull out the top and bottom filters as pictured below
- c) Wash the air filters by immersing them in warm (about 40°C) water with a neutral detergent.
- d) Rinse it and then dry it thoroughly.
- e) Carefully re-install air filters

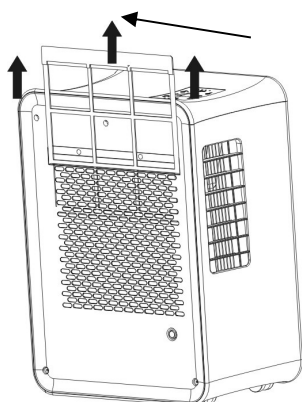

Open from here

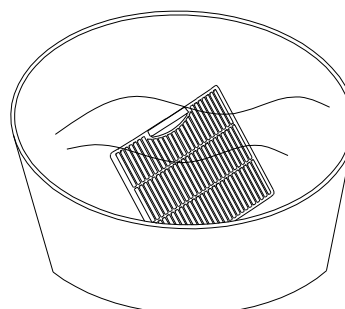

End of Season Maintenance:

1. Pull out the plug from the drainage hole and empty the internal tank. You can also drain the water by leaning the unit.
2. Then switch the unit to low fan mode
3. Keep the unit in this mode for half day - until the conduit is dried. Doing this helps to keep the inside of the unit dry and prevents mold developing
4. Turn off the unit and pull out the plug.
5. Separate the air-exhausted pipe and store it safely.
6. Cover the unit and keep it in a dry place.
7. Take the batteries out of remote control and store, or dispose, them safely

Trouble Shooting

Do not repair or disassemble the unit by yourself, unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

Trouble	Reason	Solution
The unit does not work	No power supply	Power-on and turn on the unit.
	Water-full indicator (E4)	Drain the internal water tank
	Timer function is active	Cancel Timer function
	Room temperature too low or too high	Use only in ambient temperatures between 7-35°C
The unit does not seem to perform.	In direct sunlight	Draw the curtains, UV affects RC
	Windows or doors open. Large amount of people or a heat source in the room.	Close windows and turn on another air conditioner
	Filter is very dirty	Clean or change the air filter
	Air inlet or air outlet is blocked	Clear out debris
	Room temperature is lower than setting temperature	Change the setting temperature
The unit loud	The unit is not put on flat surface	Put the unit on flat and hard surface
Compressor does not work	Overheating protection is active	Check venting. Restart the unit after 5 minutes when compressor has cooled
Remote control doesn't work	Operating distance is too far.	Move remote control closer to the unit and make sure it aims at temperature sensor
	Control panel has not received the signal from remote control.	
	The batteries are flat	Replace the batteries
E1 on LED	Electrical short on both temperature sensor and PCB	Refer to Service Centre
E2 on LED	Electrical short on temperature sensor copper tube and PCB wiring	Refer to Service Centre
E4 on LED	Indicates water tank full or poor contact of signal plug.	If bottom tank was drained and unit restarted refer to Service Centre (Check that the signal plug has been wired correctly.)
DF on LED	Anti-freezing protection	Waiting for defrosting. Function will recover automatically. No user input needed.

If the above solutions do not resolve the problem please contact the service centre.

APPENDIX



Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.

TECHNICAL DATA:

MODEL	AIRCUBE® 10DLX
Capacity	Cooling: 2.6 kW
	Heating: 2.6 kW
Rated Input (EN 60335)	Cooling: 1.1 kW
	Heating: 0.95 kW
Running Current	Cooling: 4.6 A
	Heating: 4 A
Max Noise Level (Sound Pressure)	52 dB(A)
Noise Level (Sound Energy)	62 dB(A)
Air Flow	360 m ³ /hr
Maximum Allowable Pressure	5.5 Mpa
Permitted Excessive Operating Pressure	2.3/3.5 MPa
Power Supply	220-240V/50Hz
REFRIGERANT	R410A
Moisture Removal	50l/day (at 30C/80%RH)
Net Weight	24 kgs
Dimension(L*D*H)	455x300x630 mm
Unit must be vented outside when in Air Cooling and Heating mode. For the purposes of EU regulation EN12102 this is a <i>local air conditioner</i> and produces less than 65dB(A) sound energy.	

ElectrIQ UK SUPPORT
www.ElectrIQ.co.uk/support

Please, for your own convenience, make these simple checks before calling the service line.

If the unit still fails to operate call: 0871 620 1057 or complete the online form

- 1. Has the unit been standing upright for at least 2 hours?**
- 2. Is the unit plugged into the mains?**
- 3. Is the fuse OK?**
- 4. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.**
- 5. Check if the water tank is full.**

Office hours: 9AM - 5PM Monday to Friday

**www.ElectrIQ.co.uk
Unit 2, The Nursery
Berristow Lane
South Normanton
Derbyshire, DE55 2FX**